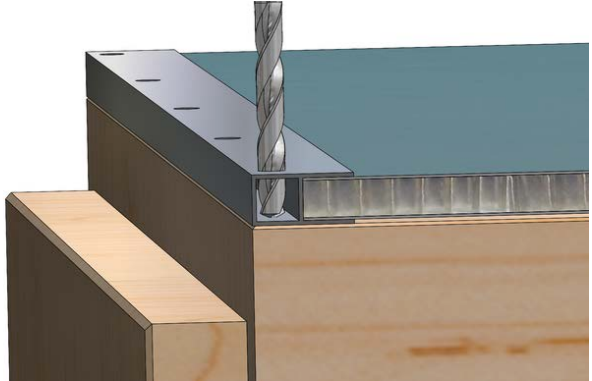
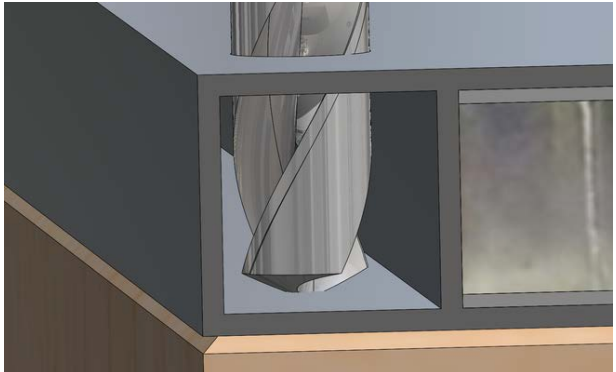
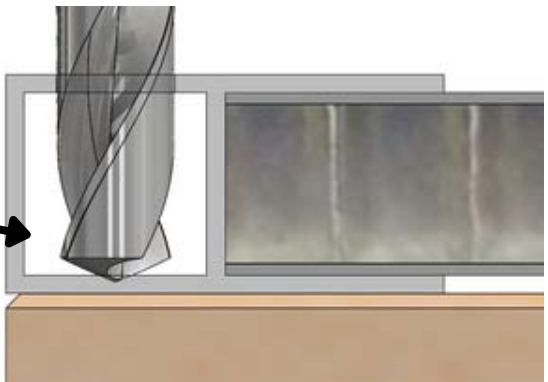
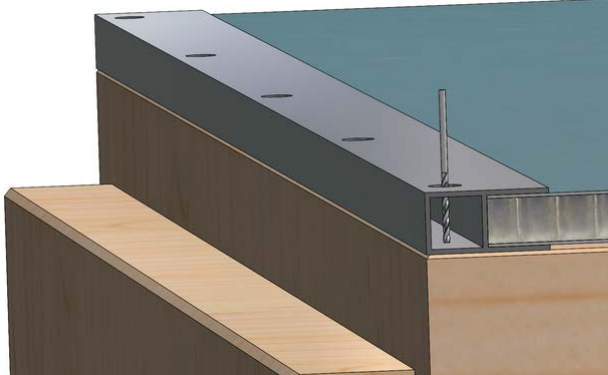
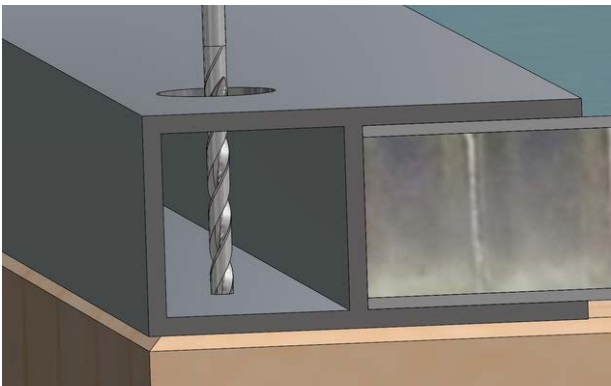
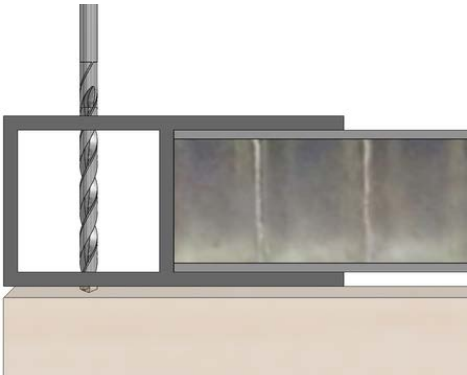
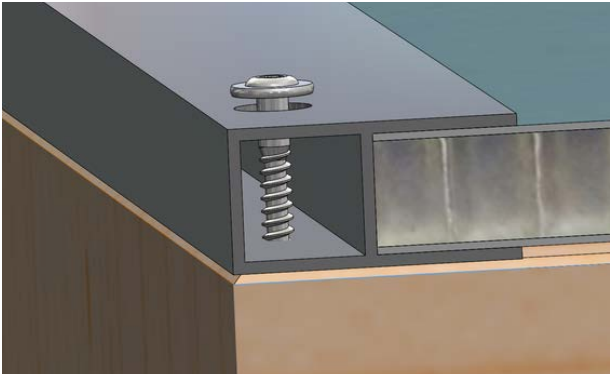


SAFEBOARD®

THE PROFESSIONAL'S CHOICE

See below for steps on how to apply BÖXT elements through the SAFEBOARD system.

1	Drill through top face of BÖXT Element using 13/32" drill bit.	
2A	Leave a dimple by removing a small amount of material from the inner bottom face for hole centering. Do NOT drill all the way through.	
2B	<i>Only a small dimple must be drilled out of the inner bottom face for hole centering in next steps.</i>	
3	Centered on the previously added dimple, drill completely through bottom face using 5/64" drill bit.	

4	Drill all the way through.	
5	As soon as material is completely drilled through, stop drilling and remove drill. Do NOT continue drilling into cabinetry material.	
6	Fasten screw through newly drilled hole.	
7	Repeat process every 8 – 12” along the length of all BÖXT Elements in contact with cabinetry base	